





















HFK-9240B-1 **ROLLATOR WALKER**

HFK-9240B-1 **ROLLATOR WALKER**



USER MANUAL




- 1 Handbrake
- 2 Handgrip Clamp Lever
- 3 Cup Holder
- 4 Backrest
- 5 Seat
- 6 Storage Bag
- 7 Front Wheel

- 8 Handgrip
- 9 Armrest Pad
- 10 Height Adjustment Button
- 11 Sit-to-stand Handle Bar
- 12 Release button
- 13 Cane Holder
- 14 Rear Wheel

SET-UP INSTRUCTIONS

STEP 1

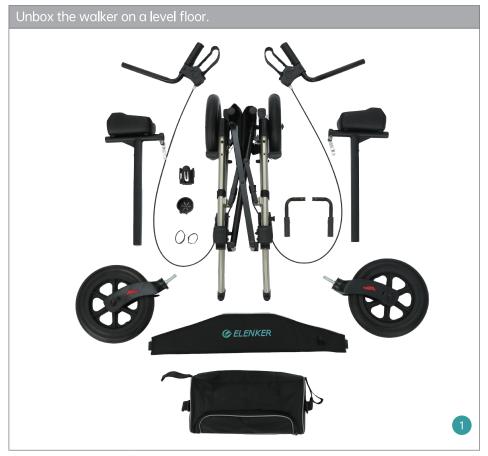

ACCESSORIES LIST



1x Cane Holder



2x Hook and Loop Straps



2x Sit-to-stand Handle Bars



1x Cup Holder


STEP 2
Front Wheels Assembly / Remove Front Wheels

Press the release button, then pull out wheel. release button

STEP 3 Unfold the Main Frame




STEP 4 **Handle Bars Assembly**

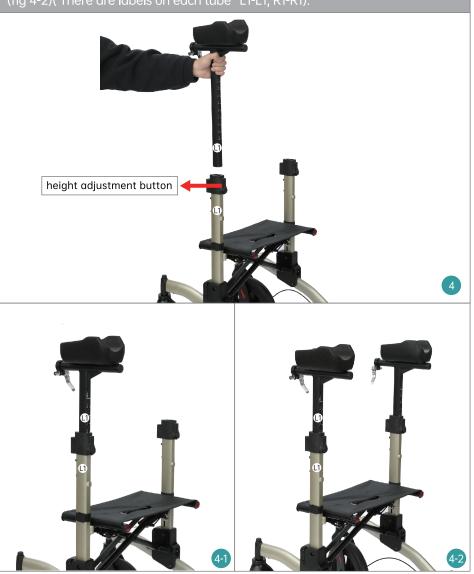


STEP 5 The Handgrip Assembly

Insert the handgrip tube into armrest pad tube(fig 5), adjust length and angle to fit your forearm, then secure the handgrip by closing clamp lever (fig 5-1,

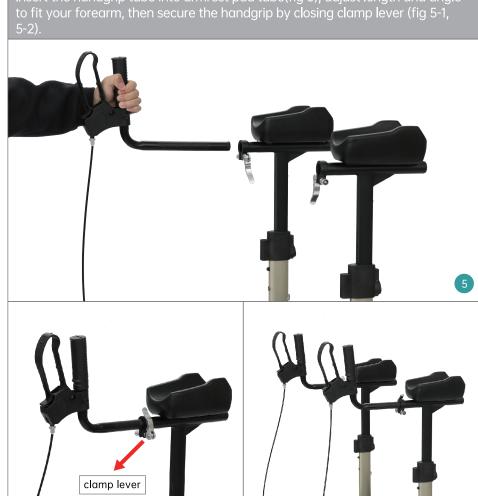




STEP 6
Backrest Assembly

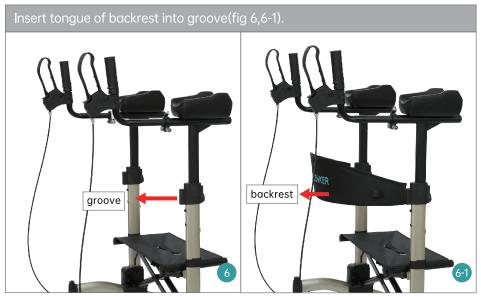



STEP 7
Sit-to-stand Handle Bar Assembly

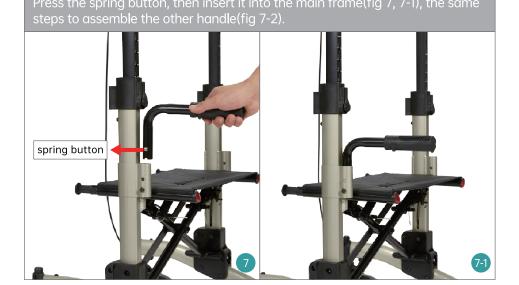




STEP 8
Storage Bag Assembly

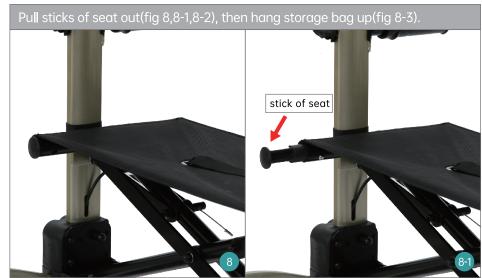

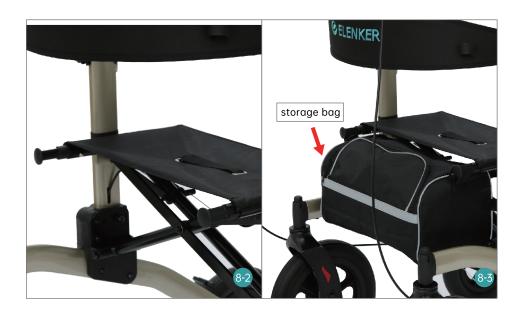


STEP 9 **Cane Holder Assembly**

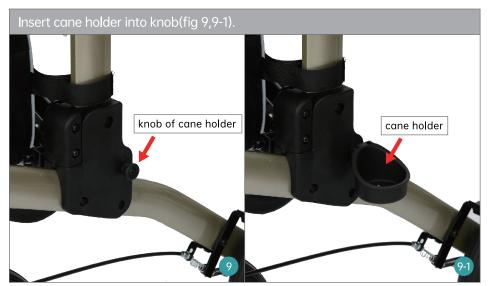

STEP 10 Organize Brake Cables




STEP 11 Cup Holder Assembly

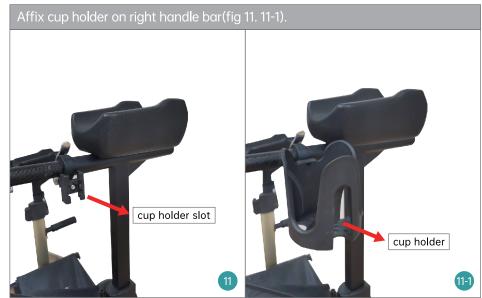

09


ONE-HAND FOLDING

Fold the walker by pulling up the strap of seat(fig 12, 12-1, 12-2), then put handle bars down, the walker will be folded flat(fig 12-3).

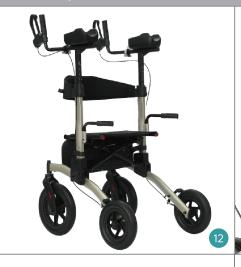





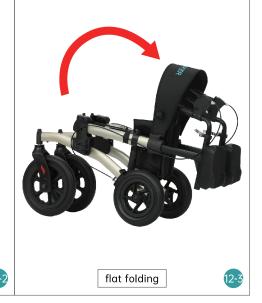


THE CURB CLIMBER



HAND BRAKE OPERATION

1. Squeeze handbrake to slow the walker.
2. Push handbrake to lock the rear wheel.

HOW TO ADJUST BRAKES

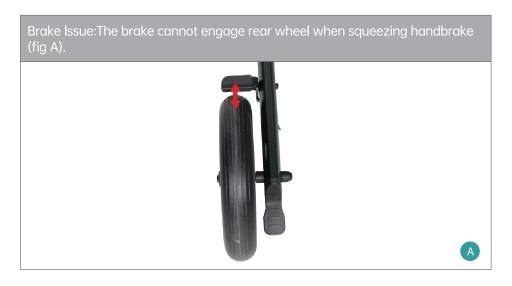



Adjust Rear Brake Position

Tools: Plier or 10mm wrench (fig 1). Use plier(or 10mm wrench) to turn M6 nut counter-clockwise(fig 2-3). And brake will be closer to wheel(fig 4). Then squeeze handbrake, if it doesn't work, repeat the steps until rear brake can engage wheel.



© CONTACT US

For any defects, parts missing, use or repair concerning our products, please contact us first, our customer service will reply within 24 hours and offer a good solution. Thank you for your support.

- 1. E-mail: elenkerservice@hotmail.com
- 2. Amazon Message: Click the Sold by "store name" under the buy box, than "ask a question".(Amazon Buyer)
- 3. Customer Help Line: (800)401-7769

WARRANTY

- * You may return most new, unopened items sold and fulfilled by Amazon within 30 days of delivery for a full refund.
- * Defects in material accessories and non-durable components such as wheels, brakes, seat, handgrips and under NORMAL use for the lifetime warranty of the original consumer purchaser.
- * The warranty does not extend to device failure due to owner misuse or negligence, or normal wear, tear and need periodic replacement.
- * During warranty periods, our warranties cover all parts labor and shipping for repairing this walker.

A WARNINGS

To ensure your safety in using ELENKER Rollator Walker, all the following instructions must be followed

- \triangle The maximum load of the walker is 300lbs.
- DO NOT use walker, if there is apparent damage or if any parts are missing.
- Ensure that brakes, height adjustment bolts or any other moving parts are in good condition and check all screws and fasteners, and retighten if necessary.
- DO NOT use on stairs, escalators, moving sidewalks, or go up or down inclines greater than 15% or diagonally across inclines greater than 5%.
- Be careful to avoid pinching your fingers while raising and lowering the handle bar and opening and closing the rollator walker frame.