



MASSAGE CHAIR USER MANUAL



RealRelax Inc.

WWW.REALRELAXMASSAGE.COM USA:(800) 513-5727









TABLE OF CONTENTS

- Thank for your purchase of this product. Before using, please read this
 USER MANUAL carefully, and pay special attention to the safety precaution
 to ensure proper operation and use.
- Please keep this USER MANUAL properly for further reference.

| SAFETY PRECAUTIONS | |
|---|----------------------------------|
| MEDICAL WARNINGS WARNING FORBIDDEN REMOVE PLUG | 03 |
| NAME AND FUNCTION OF EACH COMPONENT | |
| EXTERNAL STRUCTURE INTERNAL STRUCTURE CONTROLLER REMOTE CONTROLLER INSTRUCTION AUTO MASSAGE MODE CUSTOM MASSAGE MODE MUSIC SYSTEM | 05 06 07 08 09 10 |
| PREPARATION BEFORE USING | |
| INSTALLATION METHOD TURN ON POWER SUPPLY MOVE METHOD | 13 14 14 |
| PRODUCE STORAGE AND MAINTENANCE | |
| INSTALLATION POSITION GROUNDING INSTRUCTIONS AFTER USING THE CHAIR METHODS OF STORAGE MAINTENANCE | 15 16 16 16 16 |
| TROUBLESHOOTING GUIDE | |
| KIND REMINDING TROUBLESHOOTING GUIDE TECHNICAL SPECIFICATIONS | 17 17 18 |



SAFETY PRECAUTIONS

- Before using, please read this "SAFETY PRECAUTIONS" carefully to ensure proper operation.
- The following "SAFETY PRECAUTIONS" is of great help to your correctly use of this massage chair.
- To clearly indicate the degrees of danger and damage, the classes of accidents caused by incorrect.
 use are classified into "WARNING" and "FORBIDDEN". Instructions marked as followings should be strictly followed.

▲ MEDICAL WARNINGS

NOT RECOMMENDED FOR THE FOLLOWING PEOPLE.

- Patients with serious hyperostosis
- Swollen lump and patient thrombosis

- Patients with serious heart conditions
- Pregnant Women
- People that consume large amounts of alcohol
- People with diabetes
- People suffering from high fever
- Patients with malignant tumors or malignant abscesses
- People with distorted joints
- People with serious skin conditions
- People with spinal injuries
- All people should consult a physian and exercise care when operating this system
- Minors under 16 years or people unable to control his/her behavior,i.e.mental patients,people with paralysis,etc.
- Should not be allowed to operate the massage chair.

WARNINGS

- Use this appliance only for its intended use as described in this manual.
 Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug.
- Keep the cord away from heated surfaces.
- Please empty pockets and remove all your arm Jewellery and watch before using this chair
- Do not operate where aerosol (spray) products are being used.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- Do not remove the back cushion and do not play with roller mechanism.
- Do not remove the bottom seat and do not play with actuators.
- Keep the cord out of heavy traffic area.
- Always unplug the power cord from the electrical outlet 0immediately after use.
- Only people less than 120kgs are acceptable.
- Do not operate any equipment with damaged parts.
- Any other use not recommended by the manufacturer may cause electrical shock or injury.
- Do not touch or re-wire the wires connected to the master-box.
- Do not attempt to repair or adjust any electrical or mechanical functions on this unit.
 Doing so will void the warranty.
- Do not put your hands or head under the chair
- When using the massage chair, ascertain that the footrest is in the lowest position.

FORBIDDEN

- Do not allow children to play near the chair especially during operation
- Do not leave mobility impaired or speech impaired people alone in chair
- Do not place or stock this machine near damp places such as swimming pools or bathrooms
- Do not press by force on the massage rollers
- Do not stand on the chair or store heavy items on the chair
- Do not use in the environment which is dusty, greasy or lacking oxygen

- Do not place near steam oven, open fire, or heat
- Wear suitable clothing, do not massage with bare skin
- Do not place directly in the sun
- Do not use electric blanket while using the massage chair
- Do not use outdoors
- Do not use while smoking
- Do no use immediately after meals
- Do not sit on the back cushions, armrest, or legs
- Don't use the massage chair when your body is wet or moist as it can result in electrical shock
- Do not operate with more than one person
- Don't use when using head ornamentation as it can result in injury
- Do not stumble over electrical wires or connections

REMOVE PLUG

- Before maintenance, please pull out power plug. In addition, please do not insert or unplug the power plug with damp hands, to avoid electric shock.
- When the massage chair is not in use, please switch off power and remove the plug from socket.
 When power is off, please cut off power supply immediately and pull out the power plug from socket.


BE CAREFUL

- Please avoid using a massager after drinking or when you are not feeling well.
- Do not massage the head, elbow joints, knees, chest, abdomen, etc. directly on the massage ball.
- Do not damage the power cord or operate the massager while the power cord is damaged. This may result in electric shock or mechanical failure. Please contact the service center for a detailed inspection.


0.3

NAME AND FUNCTION OF EACH COMPONENT

EXTERNAL STRUCTURE

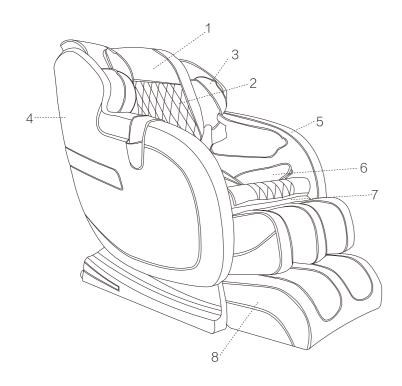

- 1.Pillow
- 2.Backpad
- 3. Shoulder Upits
- 4.Backrest
- 5.Armrest
- 6. Hip Airbags
- 7.Seat
- 8.Footrest

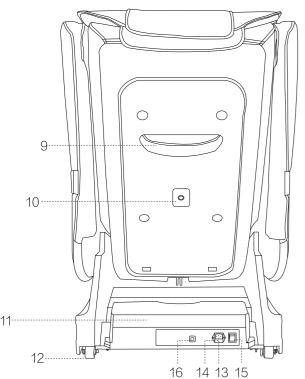


- 9.Air Vent
- 10. Specification Label
- 11. Power Supply
- 12.Wheels
- 13. Power Switch
- 14. Electrical Fuse
- 15.Cord Connector
- 16.Remote Control


INTERNAL STRUCTURE

- Shoulder Air
 Massage Unit
- 2 Armrest Air Massage Unit
- 3 Seat Air
 Massage Unit
- **4** Foot Air Massage Unit
- 5 Sole Air Massage Unit

- Back Massage
 Points
- 7 Waist MassagePoints
- 8 Back Heat
- 9 Slide Rail
- 10 Foot Roller
 Massage Unit

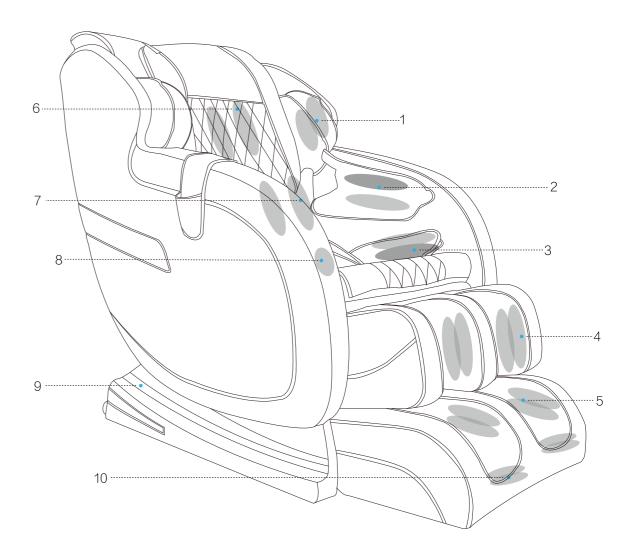

REMOTE CONTROL

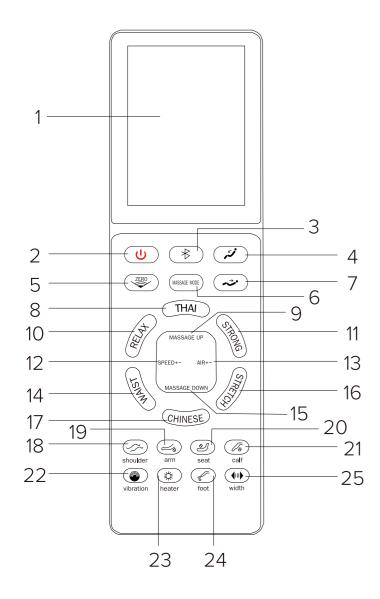

- TFT Display
- Power Button
- Bluetooth On/Off
- Backrest Rise
- Zero Gravity
- Massage Mode

- Backrest Down
- Thai Massage Mode
- Massage Roller Up
- Relax Massage Mode
- 11 Strong Massage Mode
- 12 Massage Roller Speed +-
- 13 Airbag Pressure +-
- 14 Waist Air Pressure On/Off
- **15** Massage Down
- 16 Stretch Massage Mode
- Chinese Massage Mode
- Shoulder Air Pressure On/Off
- Arm Air Pressure On/Off
- 20 Seat Air Pressure On/Off
- 21 Calf Air Pressure On/Off
- 22 Vibration On/Off
- 23 Heater On/Off
- 24 Foot Roller On/Off
- 25 Massage Roller Width +-

REMOTE CONTROL FUNCTION INTRODUCTION



On/Off:

This button starts/stops the massage system.



BLUETEETH:

Press to turn on or off Blueteeth



Press to lower backrest and feet



DOWN:

Press to raise backrest and feet



ZERO:

Press to enter zero gravity mode



MASSAGE MODE:

Press to enter custom massage mode



AUTO 1-6:

Press to enter differents auto programs

MASSAGE UP and MASSAGE DOWN:

SPEED+-:

Press to adjust the speed of back rollers

AIR+-:

Press to adjust the air pressure of the airbags

Press to adjust the back roller postion(In custom mode)



Shoulder:

Press to turn on/off Shoulder airbags shoulder



Press to turn on/off Arm airbags



seat

Press to turn on/off Seat airbags



Press to turn on/off Calf airbags



Vibration:

vibration

Press to turn on/off Seat vibration



Heater:

Press to turn on/off the heater




Foot:

Press to turn on/off foot rollers foot



Press to adjust the width of back rollers(In custom mode)

AUTO MODE

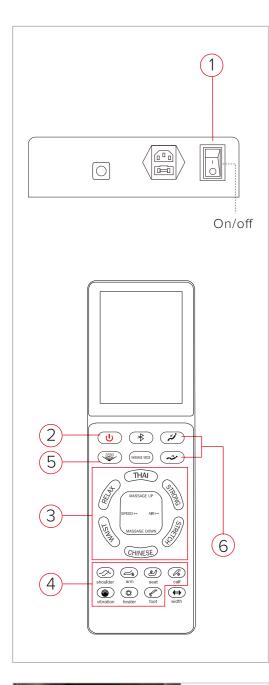



Select Auto massage mode

- 1. turn on the power:when the power is turned on, press UP and DOWN to lower or raise backrest.
- 2. press the power button: when press power button, it will automatically start Auto program one.
- 3. you can switch auto program by press auto program buttons,we have 6 automatic modes:
 - relax
 - thai
 - strong
 - stretch
 - chinese
 - sleep



you can switch to next auto program anytime, don't have to wait until current program finish.

- 4. in any auto program, you still can turn on/off: Shoulder airbags, arm airbags, seat airbags, calf airbags, seat vibration, heater and foot roller.
- 5. Zero:In any auto programs,press ZERO into zero gravity position.
- 6. UP and DOWN: In any auto programs, press UP and DOWN to lower or raise backrest.
- 7. timer:press POWER button,you can switch time from 5 mins-30 mins.
- 8. turn off: press and hold POWER button for 2 seconds, the unit will turn off.

Leg extension settings

• Footrest unit will automatically extend to suit taller individvals.

CUSTOM MASSAGE MODE

- By press "MASSAGE MODE", auto massage will stop
 You can turn on a single massage area, or multiple areas.
- Switch the massage mode by press "MASSAGE MODE"
- Adjust the width of back rollers by press "Width"
- Adjust the postion of back rollers by press "MASSAGE UP and MASSAGE DOWN"


When the massage time is finished the unit will return to upright position and shut down automatically.

MUSIC SYSTEM

Our product is designed with Bluetooth audio connection function. It can play music through connect with smart phone, tablet computer or other audio devices.

How to use:

- 1. press the BLUETOOTH button on remote-controller.
- 2. Open mobile-phone/ipad/computer BLUETOOTH capabilities, and access to the search state, your device will automatically search neighboring BLUETOOTH devices.
- 3. In a few seconds, our massage chair name will show up under the device list, select massage chair name, and the connection complete.

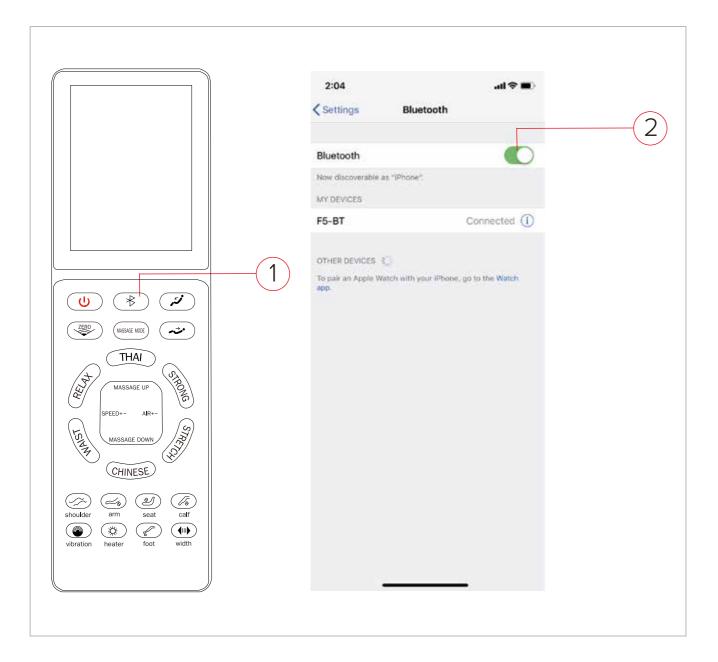

PREPARATION BEFORE USING



1 INSTALLATION METHOD

ACCESSORIES FROM BOX




Our chair is shipped in one box.






Setps:

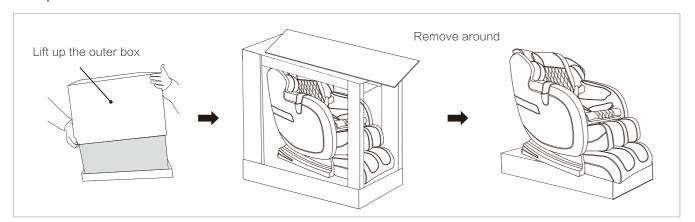

2 TURN ON POWER SUPPLY

1. Plug the power cord into three core socket with well grounding. 2. Turn on the power switch on the bottom of massage chair.

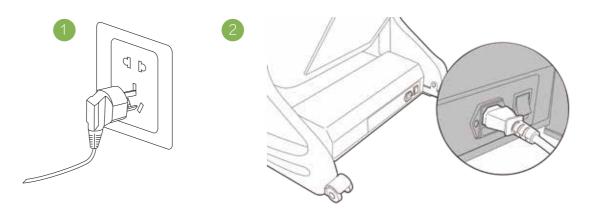



- Before switching on the chair, please make sure there is no damage on the power wire and other
- Make sure the power switch is off before the chair is connected to electricity.

3 MOVE METHOD

- There are moving rollers at the bottom of the chair.
- Raise the back to the highest point.
- Switch off and plug out the chair.
- Lift the front part of the chair as showed in the figure (one person raise the front part via holding moving holder, another person push the chair when holding the top of the chair), move the chair by the rollers.



- Don't move it when there is people in it.
- CAUTION Don't use the armrest while moving the chair, only hold the moving holder in the back and front.

INSTALLATION POSITION

PLEASE LEAVE THE SPACE AROUND THE MASSAGE CHAIR WHEN PREPARING THE MASSAGE.

- (1) Place a massage chair in a place where there is enough space for the back of the chair to recline and the stand to rise.
- (2) Make sure that there is at least 50 cm in the back of the massage chair and at least 50 cm in front of the massage chair. In order to prevent from signal interference, please keep at least 1m away from the TV, radio and other video and audio devices.





Before using, please tidy up well the cables to avoid twining or damage When the whole chair makes slide movement forward or backward to original position, please check first whether there are kids, pets or any other objects to avoid accidents. Please put carpet or other pad under the massage chair, in order to avoid any unpredictable impression on the floor.

SURROUNDING ENVIRONMENT



Keep the massage chair away from damp places (for example: bathroom) to avoid electric leakage



Keep the massage chair away from high temperatures sources (for example: stove) to avoid fire or damage to leather material

4

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment–grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER – Improper connection of the equipment–grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet; have a proper outlet installed by a qualified electrician.

AFTER USING THE CHAIR

- Please power off the chair and unplug power cable from power the supply socket after using disconnect the controller and store carefully
- Please power off the chair and unplug the chair from the power supply socket when the chair is not in use, to avoid children to start the chair accidentally
- Please store well the chair if it is not in use for a long time.



METHODS OF STORAGE

- Do not dismount the back of the chair
- Keep the massage chair free of dust
- Cover the chair with dust-free cloth to prevent dust from collecting
- Do no store in a hot, humid, damp place or in direct sunlight or heat
- Do not store in an overly cold place



MAINTENANCE

- Before cleaning unplug from electrical source to avoid shock
- Clean the cloth surface with neutral detergent or special mild detergent for cloth
- Dust can be cleaned off with a damp cloth of mild detergent and air dry
- Do not spray pesticide on device
- Specified cleaner can be used on the leather, plastic, and dried with a cloth
- Do not use a damp cloth on the electronic components which can cause shock and damage
- The leather covers (headrest, seat cushion, foot cushion) can be removed for cleaning



KIND REMINDING

During daily use, please check whether the following phenomenon exist: Scorched smell

When touch the wire, the power is on, but sometimes off

The power supply cord is hot

Other abnormal phenomenon



If problems happen above, please turn off power supply and contact the distributor or manufacturer

CAUTION for assistance.

TROUBLESHOOTING GUIDE

| Problems/Issues | Possible Cause | Trouble Shooting Method |
|---|--|---|
| Sounds like tapping or hum sounds | Sounds from air pump, motor or other mechanical parts | Normal phenomenon |
| Suddenly stops working | Bad power connection Auto program timers is up | Unplug and reinsert power cord to he chair Normal |
| Does not work after power up | Power switch is not turned on Bad connection between plug and socket Massage remote is not turned on Have broken power wire plug Bad fuse Control unit for functioning properly | Turn power switch on Connection power cord again Press power button on remote Contact professional technician Replace fuse Contact professional technician |
| Roller height changes | Rollers work alternately | Normal phenomenon |
| Abnormal sounds suddenly while working | Maybe from over working the massage chair | Cut down usage Contact professional technician |
| Can not recline the chair | Obstruction-be sure that the chair is allowed enough room to fully recline | Stop chair opearion, and move obstruction |
| can not restore position after reclined | Problem on electric motion pole or plug under bad connection | Contact professional technician |



If problems are not from above reasons, please turn off power supply and contact the distributor or manufacturer for assistance.

Note: Do not dismantle the produce by yourself, and our company shall shoulder no responsibility to the damage of the product or the inquiry of people caused by improper use. Thanks for your cooperation!

TECHNICAL SPECIFICATIONS

Name: RealRelax Favor-05 Massage Chair

Rated Voltage: 110V
Rated Frequency: 60hz
Rated Power:110w
Safety Design: Class I

Manufacturer Reserves The Right To Make Changes To Informations Published In This Document, Including Without Limitation Specifications And Product Descriptions, At Any Time And Without Notice.